


### Assembly instructions

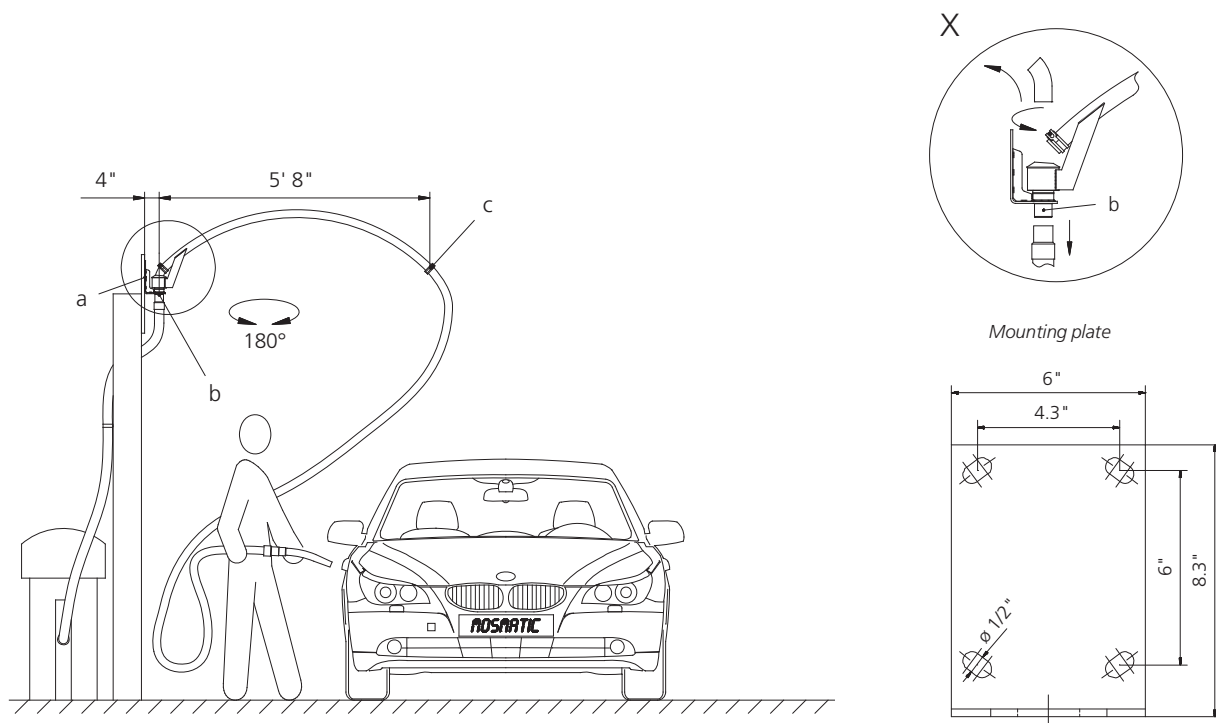

#### Wall installation

1. Install the Airsystem boom with the mounting plate (a) to the concrete wall or the steel beam.  
**Attention:** bearable hole load (e.g.: bolt 1/2") at least 30'000N
2. Connect the vacuum hose of the stationary vacuum cleaner to the vacuum port (b / 2") of the boom arm.
3. Connect the vacuum hose to the tube of the boom arm. Secure with the pipe clamp (c).



#### Maintenance


To avoid clogging of the airtsystem boom, we recommended regular cleaning. Remove the elbow-90° (see detail drawing X above).



#### For your own safety

- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Our products should only be installed by experienced users of high pressure equipment.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of vacuum cleaners are applicable.
- No modifications to the unit are permitted.

### Spare parts List

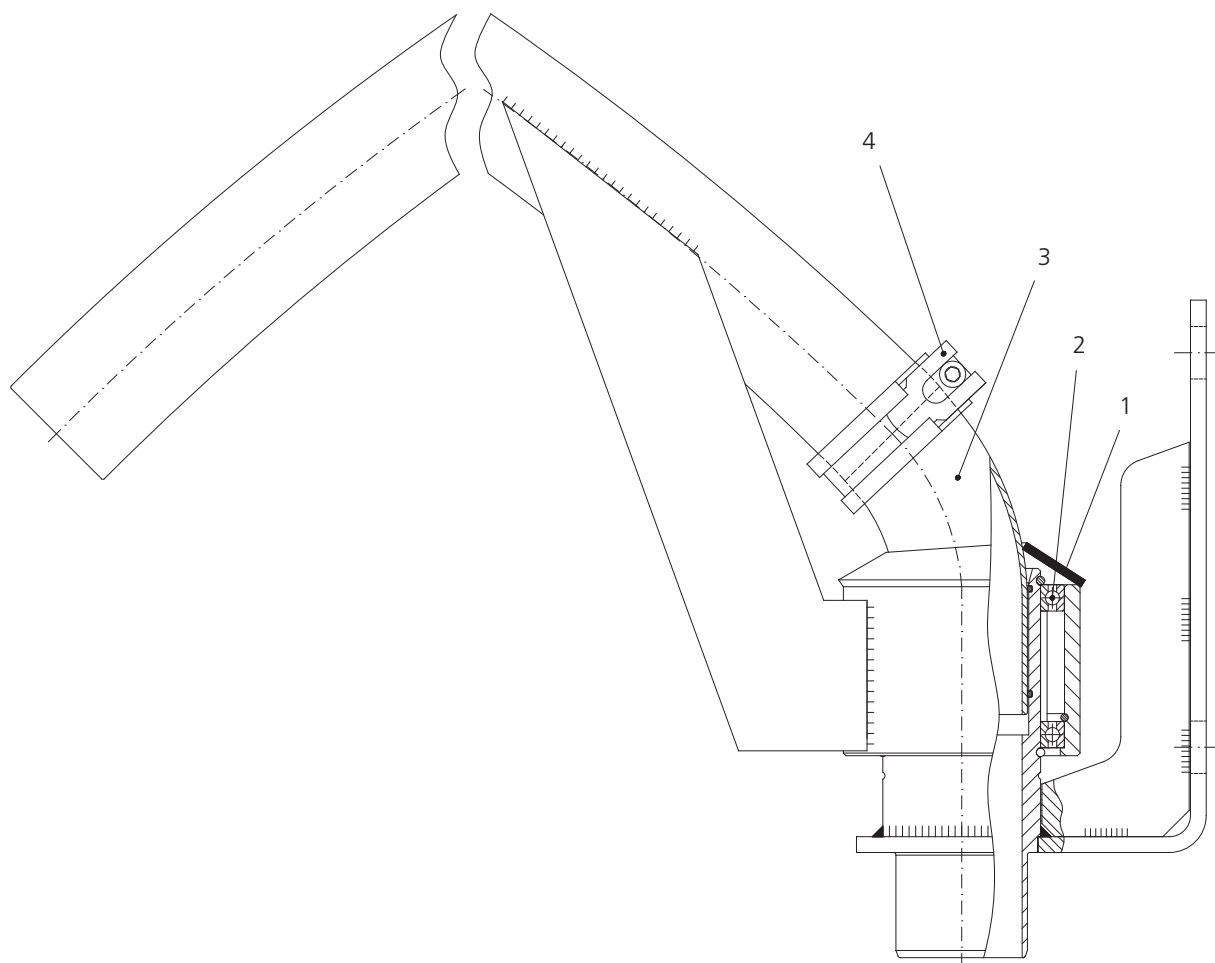

Pos.	Part No.	Description
1	901.975	Rubber cone
2	902.129	Ball bearings
3	903.134	Elbow
4	902.432	Pipe clamp $\varnothing 50$