


### Dichsatz / Seal-kit

#### Serviceanleitung

1. Sicherungsring (1) und Distanzscheibe (2, falls vorhanden) entfernen.
2. Hohlschraube (3) und Distanzscheibe (4) vorsichtig herausziehen.
- ⚠ **Vorsicht:** Hohlschraube (3) und Gehäuse (7) an den Laufflächen nicht verkratzen.
3. O-Ringe (5) und Stützringe (6) entfernen.
4. Die neuen O-Ringe (5) montieren und in die richtige Position drücken, so dass der Platz für den Stützring (6) frei ist.
5. Stützring (6) montieren, darauf achten dass er an der richtigen Position ist.
6. O-Ringe (5), Stützringe (6) und Hohlschraube (3) fetten.
7. Hohlschraube (3) mit Distanzscheibe (d) vorsichtig ins Gehäuse einführen.
8. Distanzscheibe (2, falls vorhanden) und Sicherungsring (1) montieren.

#### Service instructions (original language German)

1. Remove the snap ring (1) and the space slice (2, if mounted).
2. Pull out the hollow bolt (3) and the space slice (4) carefully.
- ⚠ **Caution:** make sure that the bearing surface from the hollow bolt (3) and the housing (7) won't get any scratches.
3. Remove o-rings (5) and support rings (6).
4. Mount the new o-ring (5) and push them in the correct position, so that you have space for the support ring (6).
5. Mount the new support ring (6). Make sure that it is in the correct position.
6. Grease the o-ring (5), support ring (6) and the hollow bolt (3).
7. Insert carefully the hollow bolt (3) with the space slice (4) into the housing.
8. Mount the space slice (2, if available) and the snap ring (1).

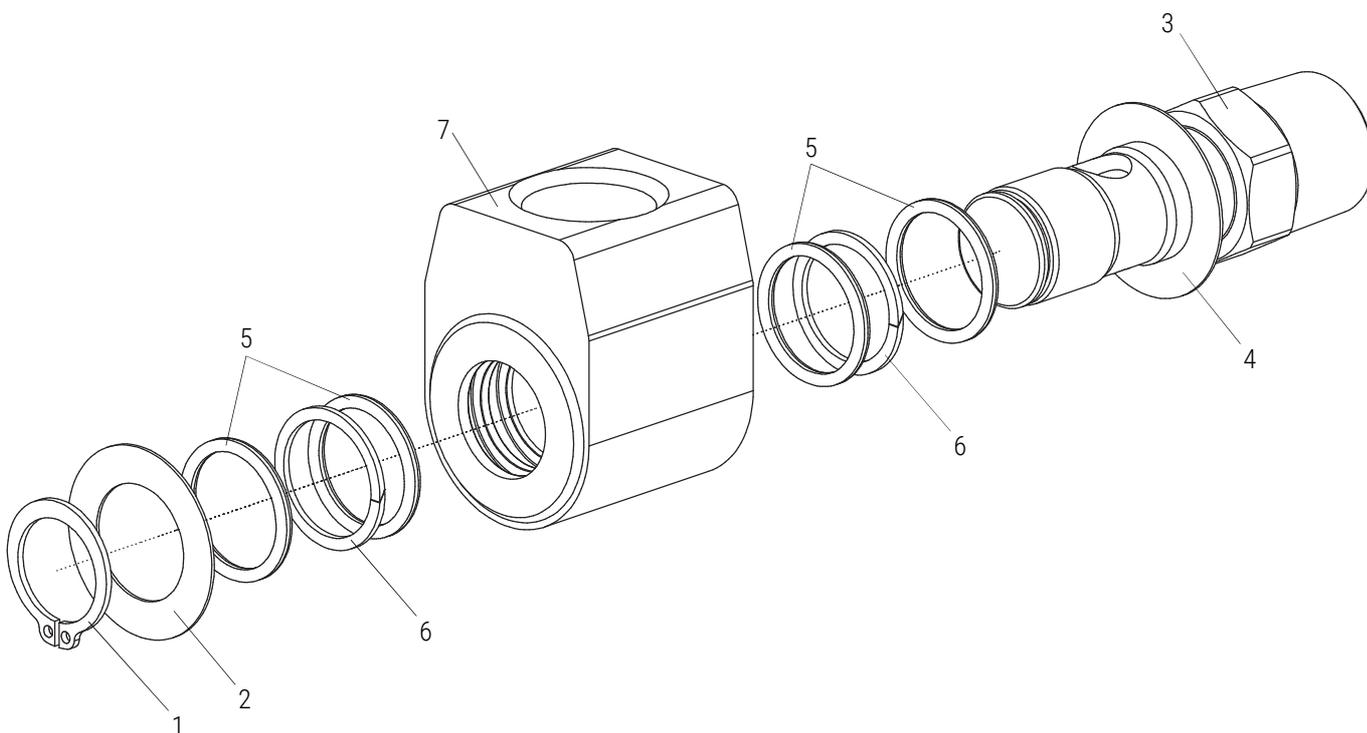

#### Dichsatz enthält / Seal-kit contains:

Art. Nr.	Bezeichnung	Description
43.904	O-Ring (4x)	O-ring (4x)
	Stützring (2x)	Support ring (2x)