

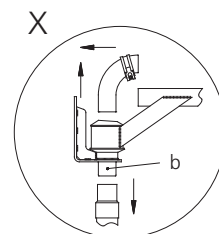


Montageanleitung

Assembly instructions

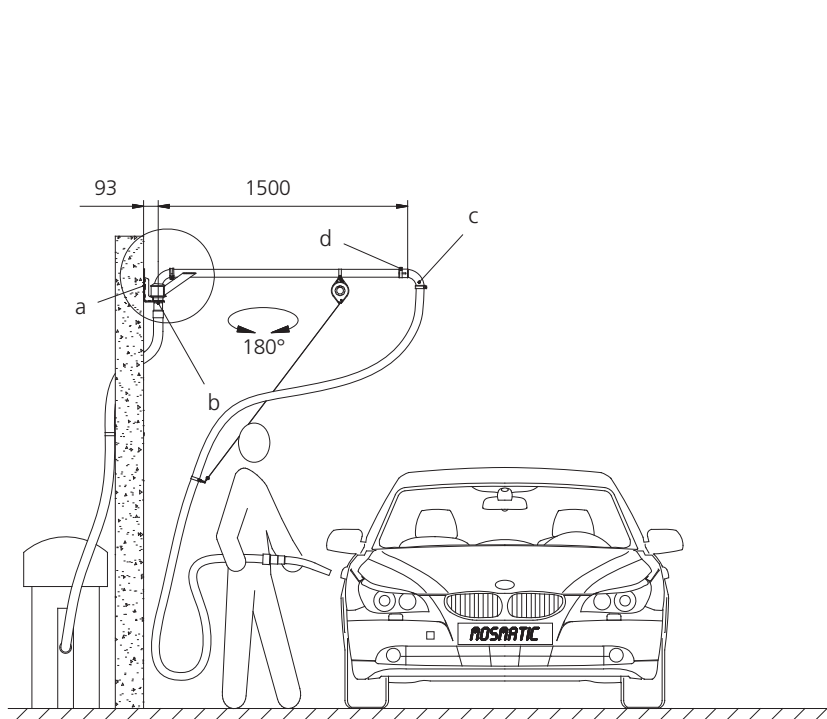

Montageplatte / Mounting plate

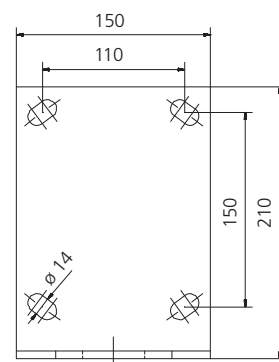

Wand-Installation

1. Den Luftsystem-Kreisel mit der Wandmontageplatte (a) an die Betonwand befestigen.
- Achtung:** Tragkraft pro Bohrung (z.B.: Schraube M12) min. 30'000N
2. Den Schlauch vom stationären Staubsauger an den Verbindungsstutzen (b / 40mm) des Kreiselarmes anschliessen.
3. Den Schlauch mit dem Ende des Kreiselarm-Rohres oder dem Rohrbogen (c / Zubehör) zusammen stecken und mit der Rohrbride (d) sichern.



Wartung + Reinigung

Um eventuellen Verstopfungen im Rohrbogen des Luftsystems vorzubeugen, empfehlen wir, den Rohrbogen regelmässig zu entfernen und zu reinigen (siehe Detail X in Skizze).



Für Ihre Sicherheit

- Alle Anleitungen sind vor erster Inbetriebnahme zu lesen. Das Gerät ist auf ordnungsgemässen Zustand und Betriebssicherheit zu prüfen.
- Die Installation unserer Produkte darf nur von Personen durchgeführt werden, die mit der Bedienung und den damit verbundenen Gefahren vertraut sind.
- Es gelten die Sicherheitsrichtlinien (Unfallverhütungsvorschriften) des Herstellers von Staubsaugern.
- An den Geräten dürfen keine Veränderungen vorgenommen werden.

Wall installation

1. Install the Airsystem boom with the mounting plate (a) to the concrete wall.
- Attention:** bearable hole load (e.g.: bolt M12) at least 30'000N
2. Connect the vacuum hose of the stationary vacuum cleaner to the vacuum port (b / 40mm) of the boom arm.
3. Connect the vacuum hose to the tube or the elbow-90° (c / accessor) of the boom arm. Secure with the pipe clamp (d).



Maintenance


To avoid clogging of the airtsystem boom, we recomend regular cleaning. Remove the elbow-90° (see detail drawing X above).



For your own safety


- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Our products should only be installed by experienced users of high pressure equipment.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of vacuum cleaners are applicable.
- No modifications to the unit are permitted.

Ersatzteilliste / Spare parts List

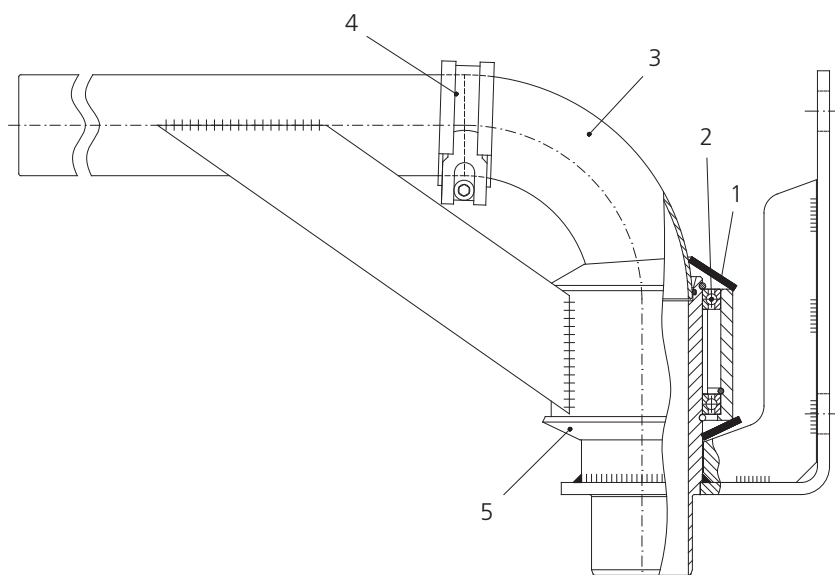

Pos.	Art. Nr.	Bezeichnung	Pos.	Part No.	Description
1	901.805	Gummischeibe	1	901.805	Rubber cone
2	12295	Rillen-Kugellager	2	12295	Ball bearings
3	902.479	Rohrbogen-90°	3	902.479	Elbow-90°
4	902.480	Rohrbride ø40	4	902.480	Pipe clamp ø40
5	37940	Gummischeibe	5	37940	Rubber cone

Zubehör / Accessories

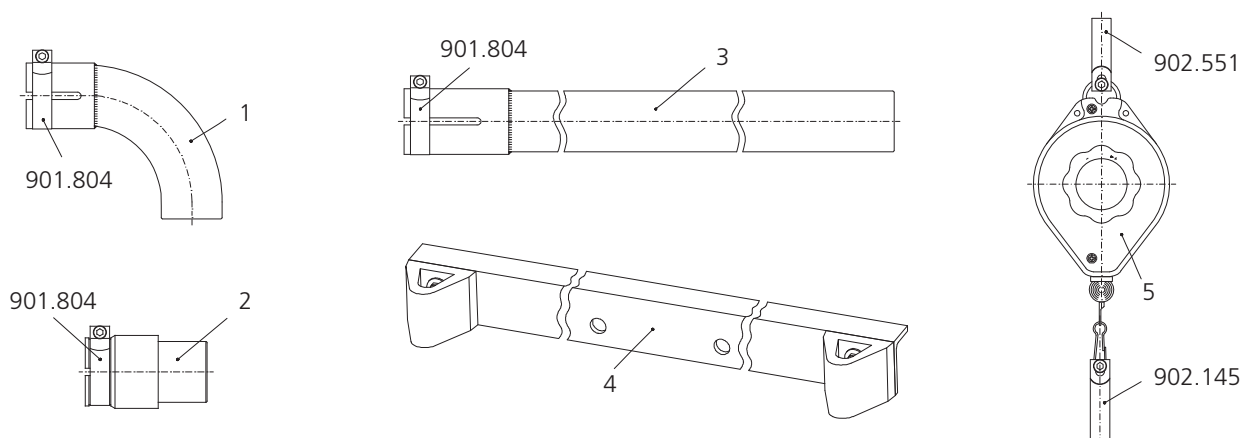

Pos.	Art. Nr.	Bezeichnung	Pos.	Part No.	Description
1	60.305	Rohrbogen-90° inkl. 1x Rohrbride	1	60.305	Elbow-90° incl. 1x Pipe clamp
2	60.308	Drehmuffe ø40 inkl. 1x Rohrbride	2	60.308	Swivel Coupling ø40 incl. 1x Pipe clamp
3	60.304	Verlängerung inkl. 1x Rohrbride	3	60.304	Extension incl. 1x Pipe clamp
4	60.319	Anschlag mit Puffer	4	60.319	Bracket with bumpers
5	60.307	Federzug inkl. 2x Rohrbriden	5	60.307	Spring Balancer incl. 2x Pipe clamp